


DURASWING

AUTOMATIC GATE OPERATORS

PEDESTAL POSITIONING
INWARD SWING

OPENING ANGLE	(A)	(B)	APPROX. (C)
60°	500	180	1300
70°	500	280	890
80°	500	330	675
90°	500	400	580
100°	500	500	520
110°	500	550	485
120°	500	660	460

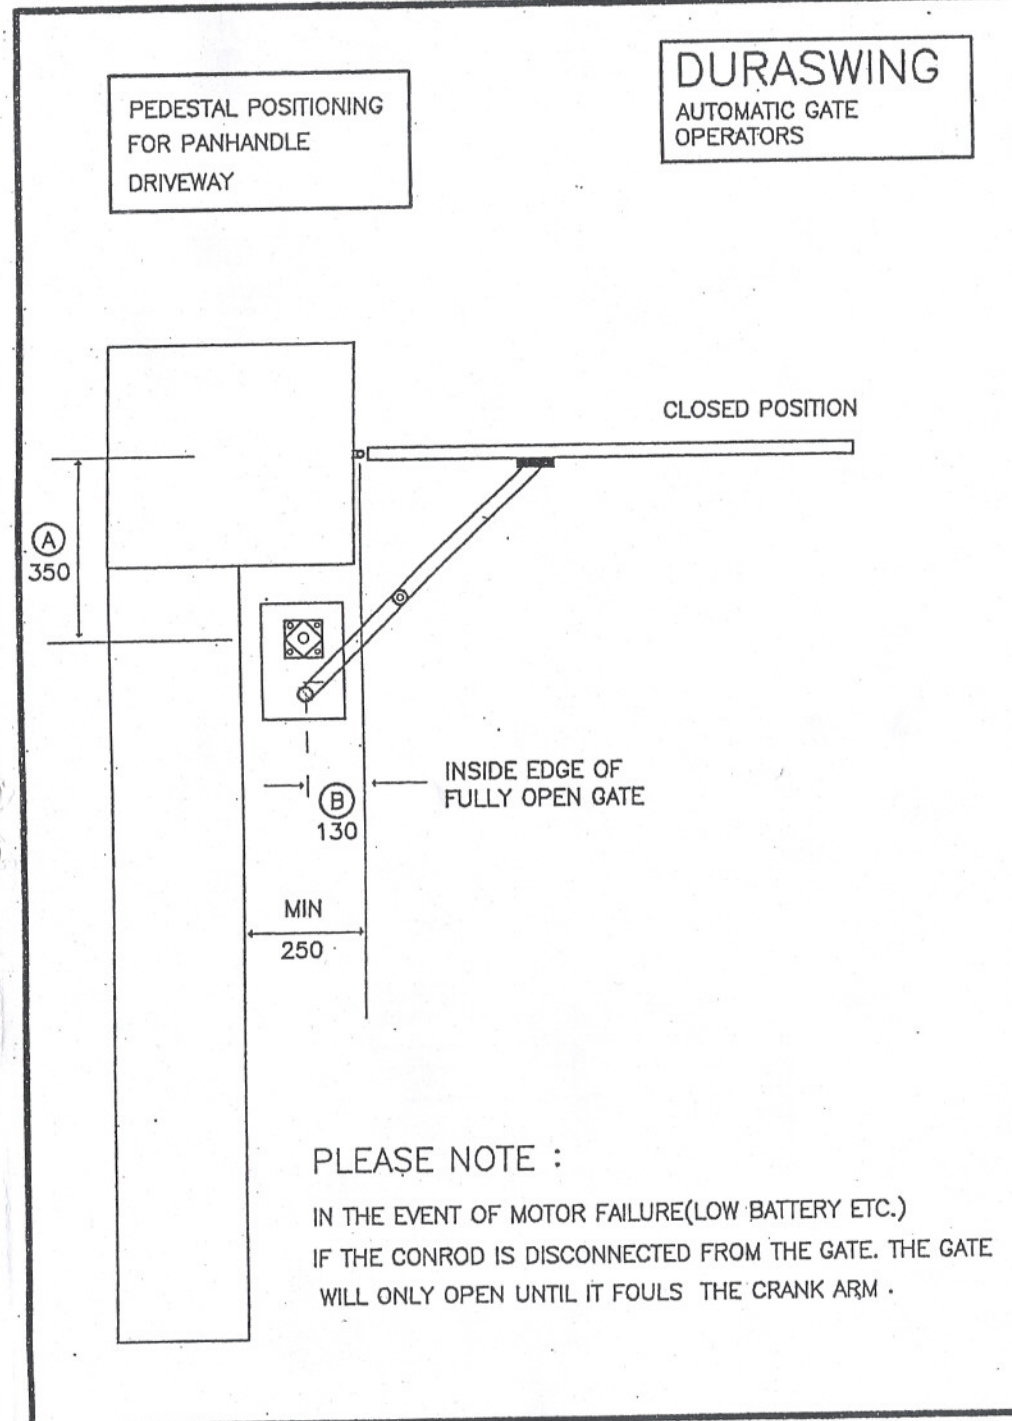

DURASWING

AUTOMATIC GATE OPERATORS

PEDESTAL POSITIONING
FOR PANHANDLE
DRIVEWAY

CLOSED POSITION

INSIDE EDGE OF
FULLY OPEN GATE

MIN
250

PLEASE NOTE :

IN THE EVENT OF MOTOR FAILURE (LOW BATTERY ETC.)
IF THE CONROD IS DISCONNECTED FROM THE GATE. THE GATE
WILL ONLY OPEN UNTIL IT FOULS THE CRANK ARM .