


PS64-1 CCTV Power store 9 Way 5Amp Distribution Box

 
User's Manual

1.Assembly:

Bottom

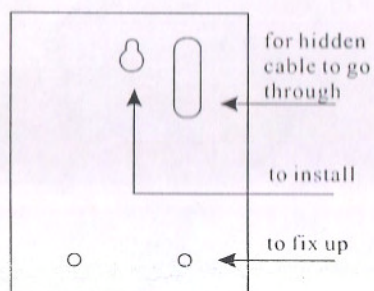


Side



the rubber can be taken out for the PVC to go through it

2.Connection:

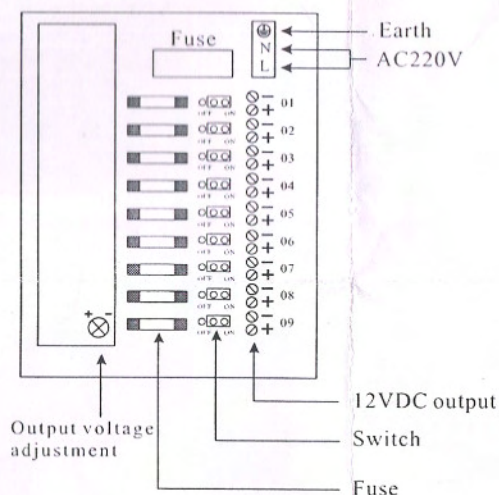

3.Specification:

Input Power:	90-260V AC @ 50-60Hz
Output Power:	12VDC 10% tolerance Adjustable 11-13VDC
Output current (1-9):	5Amp (60 Watts)
Peak Output Current:	7.5Amp (90 Watts) Maximum

4.Electrical Features:

- 9 Individually fuse protected Outputs rated 1 Amp each
- Output Current-limiting and Over-voltage protection

5.Operation:

Use a suitably rated plug and lead of the input power specification, and ensure a proper connection to Earth at all times.

Ensure the AC Input power is off before working with the unit.

The Unit will supply a constant voltage to all Output contacts as specified. Each Output is protected with a fast blow fuse rated to 1 Amp.

The fuse will blow open circuit if the current rating is exceeded and the remainder Outputs will be unaffected.

The unit is protected against reverse polarity and fuse fault. Should the common supplied output be short circuited, the unit will drop the voltage until the fault is corrected. It will immediately reset the voltage when the fault is removed. The same applies when exceeding the current specification.