




FITTING INSTRUCTIONS

1. Rest the triangle plate against the wheel with the chain hole at bottom left and chain loop (the piece of chain with both ends attached to the triangle plate) looped over the right side of the tyre.



2. Pass the unattached chain end around the back of tyre, and over the vehicle's suspension arm.

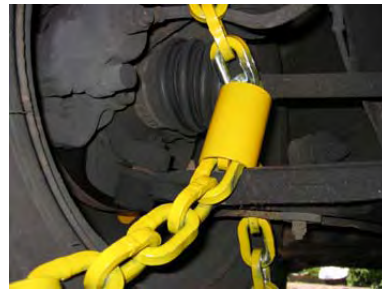

3. Collect the chain end from behind the left side of the wheel and pull to take up all the slack in the chain loop.

Now pass the chain end through the chain hole and pull the chain again until the triangle plate fits flush to the tyre and covers the wheel nuts.

Note: you may need to lift the clamp.



4. Thread padlock shackle through chain link as close as possible to the chain hole to ensure a tight fit of the clamp against the wheel, and lock padlock.



5. The vehicle is now immobilised.

