

D & D

DOUBLE & DUAL OUTDOOR
ADVANCED ASIC
PASSIVE INFRARED
INTRUSION DETECTOR



CROW
ELECTRONIC ENGINEERING LTD.
INSTALLATION INSTRUCTIONS

P/N: 7101844 Rev. C. A.Y.

GENERAL DESCRIPTION

Crow Electronic Engineering Ltd. presents D & D, the new PIR detector, intended for operation in difficult conditions. D & D achieves unprecedented signal differentiation, while its powerful "ASIC" (Application Specific Integrated Chip) microcontroller analyses the signal sensed by TWIN DUAL ELEMENT PIR detectors to minimize the rejection of false alarms and to determine intrusions.

- The ASIC guarantees constant filtering at all gain levels, without degradation of the signal to noise ratio, using embedded analog multiplier and signal processing.
- The ASIC provide multiplier self test mode on every operation to ensure complete functionality of the detector.
- The ASIC ensures maximum protection against RFI and EMI disturbances.

- The D & D includes an enhanced bi-directional temperature compensation which provides constant detection of human body at ambient temperature range from -20°C to +50°C (-4°F to +122°F). While most PIRs fail to detect an intruder when background temperature nears body temperature, the D & D proves to be fully effective in differentiating between them.
- The ASIC based D & D allows identical detection from left to right and right to left when crossing zones.
- The D & D provides an ultimate monitoring of the protected site, together with automatic updating and self reconfiguring according to the environmental changes.

MOUNTING LOCATION

A PIR is more sensitive to motion across its field of view than to motion to and from it. Mounting height and location should not cause the D & D to exceed its estimated detection range. It should utilize existing elements to attain a stable background, by facing walls and solid fences.

While the D & D is capable of detecting intrusions under difficult conditions, it is recommended to install a covering roof against weather elements (rain, snow) and protection against direct sunlight.

Avoid the following location:

- Facing direct sunlight
- Facing reflective surfaces such as swimming pool, shiny painted surfaces, puddles, etc.
- Mounting surfaces that absorb heat (black walls), metal gates or fences, hot water pipes, etc.
- Areas that are susceptible to a rapid change of temperature - radiators, etc.
- Sources of air currents - air conditioning openings, ventilation ducts, etc.
- Above a window or a door.
- Areas with moving objects (swaying trees, bushes, etc.).

IMPORTANT:

Where a small animal is present, the D & D MUST be mounted 2.1m (7ft) or higher (max. 3.0m /10 ft) above floor level.

MOUNTING THE DETECTOR

A variety of mounting positions are possible with the standard housing of the D & D.


To open the front cover of the housing:

1. Pry off the front cover and unscrew the four screws of the integral gray cover and remove the cover.
2. Remove the PC board housing (and the board) by pushing the right wall of the housing outward and gently lifting out the PC board housing.
3. Prepare mounting holes in accordance with the desired mounting position. Cover all openings for screws with RTV/SILICON or similar sealant.
4. A special opening for cable entry is provided in the D & D. Be sure to use this, and only this opening, for wires.

5. Please make sure the lens is right side up. The lens has an arrow on it and the housing has a slit.
6. To re-fit the housing (and PCB), insert its left into the groove on the left wall of the housing, pull or push out the right wall and gently snap the board into position. The vertical calibration scale on the right side of the board should be directly under the marker in the middle of the right wall, calibrate the PCB with its housing according to the mounting height and the tables p.p. 14, 15.
7. In areas affected by heavy rains the cable entry hole should be open - for cable only (sealant free). In areas affected by heavy dust the cable entry hole should be sealed with RTV/SILICON or similar sealant.

TERMINAL BLOCK WIRING

Run the cable through the cable entry hole and connect the wires in accordance with the following instructions:



- Terminal 1 - Marked "-" - Connect to a negative Voltage output of ground of the control panel.
- Terminal 2 - Marked "+" - Connect to a positive Voltage output of an 8.7 - 16Vdc source (usually from the alarm control unit).
- Terminal 3 & 4 - Marked "TAMP". If a Tamper switch is required connect these terminals to a 24 hour normally closed protective zone in the control unit. If the front cover of the detector is opened, an immediate alarm signal will be sent to the control unit.

- Terminal 5 - marked "C". This is the central output relay contact used with Terminal 6 or 7.
- Terminal 6 - Marked "NC". This is the normally closed alarm output relay contact of the detector. With Terminal "5", these two terminals should be connected to a normally closed zone in the control panel.
- Terminal 7 - Marked "NO". (Optional only, is manufactured according special application.) This is the normally open alarm output relay contact of the detector. With Terminal "5", these allow the D&D to be connected to a control panel that requires a balanced end of line resistor configuration. If such a control panel is not used, the "NO" terminals have many other uses: it may be used to trigger a timer to operate security lighting, etc.
- Terminal 8 - Marked "EOL"- End of Line Option.

DIP SWITCH SETTING

DIP-SWITCH 1 - LED ENABLE / DISABLE

- ON (up) - the LED is enabled.
OFF (down) - the LED is disabled.

The LED ENABLE / DISABLE switch has no effect on the RELAY output.


DIP-SWITCH 2 - LOW / HIGH RISK

Dip-switch 2 provides control for normal or high risk operating environments.

- ON (up) - This setting is for a harsh environment with air drafts (High Risk).
OFF (down) - This setting is for operation within a stable environment (Low Risk).


PIR RANGE ADJUSTMENT

Use the potentiometer to adjust the detection range between Minimum and Maximum (factory set to Middle Position). Rotate the potentiometer clockwise to increase range, counter-clockwise to decrease range.

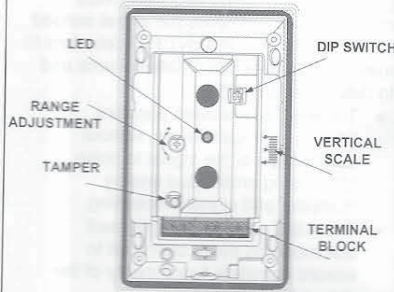


IMPORTANT - After adjusting the sensitivity perform a walk test to verify optimum correct sensitivity in the protected area.


VERTICAL CALIBRATION LENS PATTERN EXTRA WIDE ANGLE (01DD) LENS

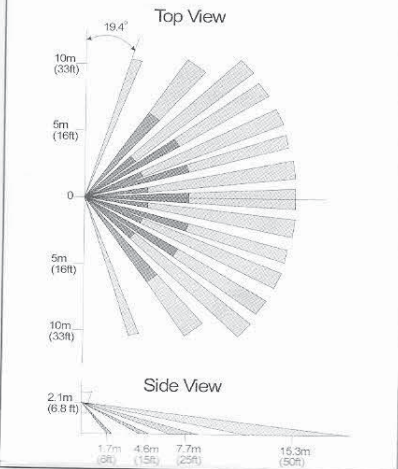

LONG RANGE (02DD) LENS

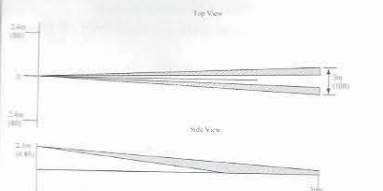

VERTICAL CURTAIN (03DD) LENS

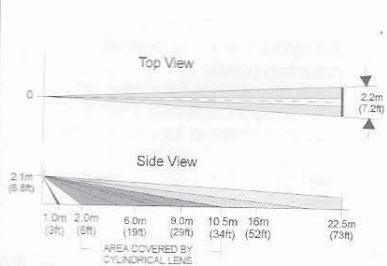

D&D VERTICAL CALIBRATION CHARTS

EXTRA WIDE ANGLE (01DD) LENS

Table with 11 columns for vertical scale heights (1.0m to 3.0m) and 11 rows for horizontal distances (-5 to +5). Values indicate range or over-range.

LONG RANGE (02DD) LENS

Table with 11 columns for vertical scale heights (1.0m to 3.0m) and 11 rows for horizontal distances (-5 to +5). Values indicate range or over-range.

VERTICAL CURTAIN (03DD) LENS

Table with 11 columns for vertical scale heights (1.0m to 3.0m) and 11 rows for horizontal distances (-5 to +5). Values indicate range or over-range.

TECHNICAL SPECIFICATIONS

Table of technical specifications including Power Input (9.6-16 Vdc), Current Consumption (Standby/Active), Sensitivity (11.1°C @ 0.9 m/sec), Alarm Output (N.C. 100 mA @ 24 Vdc), Tamper switch (N.C. 100 mA @ 24 Vdc), Operating ambient temperature range (-20°C to +50°C), Operating humidity range (Up to 95%), Storage temperature range (-40°C to +80°C), Pyrosensorelectrics (2 matching dual element), RFI protection (≥30 V/m @ 10-1000 MHz), EMI immunity (50,000 V electrical interference), Self test (30 sec indicated), and Dimensions (135mm x 85mm x 43.4mm).

Crow reserves the rights to change specifications without prior notice

CROW ELECTRONIC ENGINEERING LTD. ("Crow") - WARRANTY POLICY CERTIFICATE

This Warranty Certificate is given in favor of the purchaser (hereunder the "Purchaser") purchasing the products directly from Crow or from its authorized distributors. Crow warrants these products to be free from defects in materials and workmanship under normal use and service for a period of 24 months from the last day of the week and year whose numbers are printed on the printed circuit board inside these products (hereunder the "Warranty Period"). Subject to the provisions of this Warranty Certificate, Crow undertakes, at its sole discretion and subject to Crow's premises, all such procedures are from time to time, to repair or replace, free of charge for materials and/or labor, products proved to be defective in materials or workmanship under normal use and service. Repaired products shall be warranted for the remainder of the original Warranty Period. All transportation costs and in-transit risk of loss or damage related, directly or indirectly, to products returned to Crow for repair or replacement shall be borne solely by the Purchaser. Crow's warranty under this Warranty Certificate does not cover products that are defective (or shall become defective) due to: (a) alteration of the products (or any part thereof) by anyone other than Crow; (b) accident, abuse, negligence, or improper maintenance; (c) failure caused by a product which Crow did not provide; (d) failure caused by software or hardware which Crow did not provide; (e) use or storage other than in accordance with Crow's specified operating and storage instructions. There are no warranties, expressed or implied, of merchantability or fitness of the products for a particular purpose or otherwise, which extend beyond the description on the face hereof. This limited Warranty Certificate is the Purchaser's sole and exclusive remedy against Crow and Crow's sole and exclusive liability toward the Purchaser in connection with the products, including without limitation - for defects or malfunctions of the products. This Warranty Certificate replaces all other warranties and liabilities, whether oral, written, (non-mandatory) statutory, contractual, in tort or otherwise. In no case shall Crow be liable to anyone for any consequential or incidental damages (inclusive of loss of profit, and whether occasioned by negligence of the Crow or any third party on its behalf) for breach of this or any other warranty, expressed or implied, or upon any other basis of liability. Furthermore, Crow does not represent that these products are not to be compromised or circumvented, that these products will prevent any person injury or property loss or damage by burglary, robbery, fire or otherwise; or that these products will in all cases provide adequate warning or protection. Purchaser understands that a properly installed and maintained product may in some cases reduce the risk of burglary, fire, robbery or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss or damage as a result. Consequently, Crow shall have no liability for any personal injury, property damage or any other loss based on claim that these products failed to give any warning. If Crow is held liable, whether directly or indirectly, for any loss or damage with regards to these products, regardless of cause or origin, Crow's maximum liability shall not in any case exceed the purchase price of these products, which shall be the complete and exclusive remedy against Crow.

CROW ELECTRONIC ENGINEERING LTD.

12 Kineret St. Airport City, 70100 Israel Tel. +972 3 9726000 Fax. +972 3 9726001 sales@crow.co.il support@crow.co.il www.thecrowgroup.com

CROW LATIN AMERICA USA INC.

7200 NW 19 st. Suite 307 Miami Fl 33126, USA Tel. +305 513 4007 Fax. +305 513 4005 rejsane@crowlatinamerica.com www.crowlatinamerica.com

ARROWHEAD ALARM PRODUCTS

344B, Rosedale Road Park Farm Industrial Estate Albany, Auckland New Zealand Tel. +64 9 414 0085 Fax. +64 9 414 0088 www.aap.co.nz

These instructions supersede all previous issues in circulation prior to March 2012.